 


Wildwood Express v3 – Quick Reference Guide

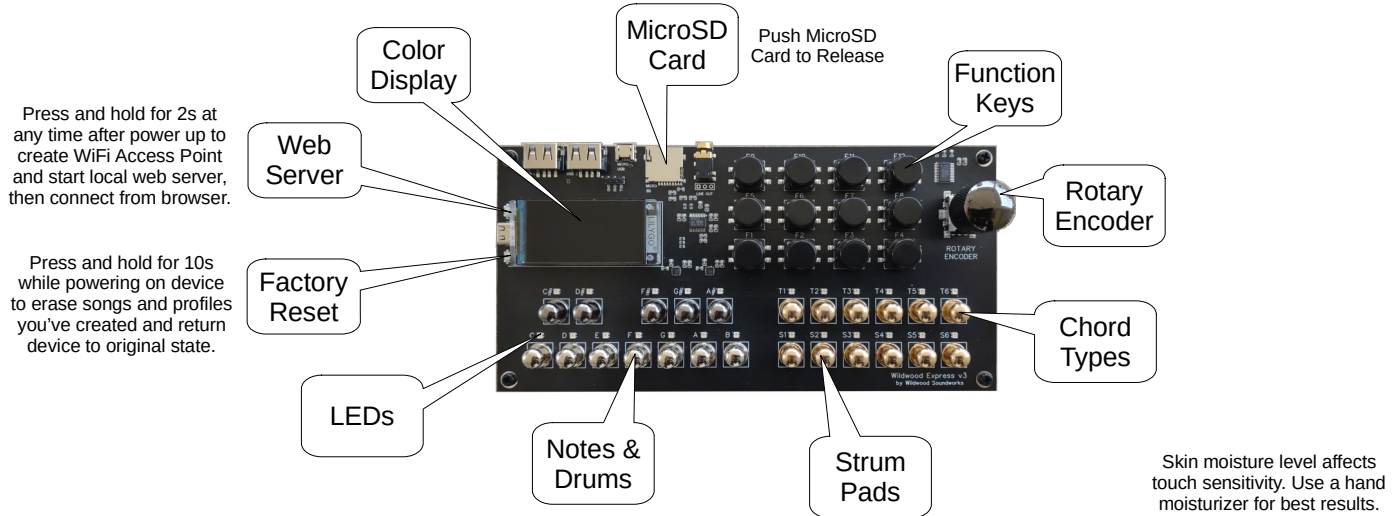

Function Keys: The function keys control basic operation

F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12
Octave Down	Octave Up	Previous Channel	Next Channel	Previous View	Next View	Previous Menu	Next Menu	Beginning of Song	Play/Stop	Record	End of Song

To **Clear** the song, press **Beginning of Song (F9)** and **End of Song (F12)** at the same time.

To enter **Overdub** mode, press **Record (F11)** while **Playing (F10)**, or **Play (F10)** while **Recording (F11)**.

Rotary Encoder:

- 1) Turn the knob left or right to navigate in views and menus.
- 2) In a menu, press the knob to change or select the current menu item.
- 3) In a view, press and hold the knob to change the scroll action between position and time.

Strum Pads:

- 1) Touch one or more pads to play the notes in the current chord.
- 2) The note continues playing even after you release the pad.
- 3) Press a Note & Drum pad to silence the current chord and select a new root note.
- 4) You can touch the strum pads in any order to get a variety of effects.

Notes & Drums:

- 1) Touch a pad to play a note or drum sound. The harder you press it, the louder is sounds.
- 2) Press Previous Channel or Next Channel to select a new channel.
- 3) Channel 10 is the drum channel. Other channels are for instruments.
- 4) You can change the instrument for a channel using the Channel Menu.
- 5) The LED color indicates the channel number.

Important: When one or more Chord Type LEDs are illuminated, the Note & Drum pads select the root of the chord to strum **instead** of playing the note. If it seems like the Note and Drum pads aren't working, try turning off the Chord Type. Remember this when using a MIDI keyboard!

Views:

- 1) Navigate across Note, Song, Step and Sample Views using Previous View (F5) and Next View (F6)
- 2) Note View shows a "piano roll" of the notes in the song. You can control which channels are displayed using the Channel Menu.
- 3) Song View shows a view of the entire song, and where notes occur in each channel.
- 4) Step View enters Step Mode, where notes and drums are automatically recorded as steps (same duration).
- 5) In Step View, turn the rotary encoder to skip a step or create a rest.
- 6) Sample View lets you record, view, scroll, zoom and assign your own custom samples

Chord Types:

- 1) Touch one or more pads to select a chord type (e.g. Major, minor, etc.) for strums.
- 2) Then touch a Note Pad to select the root of the chord and use the Strum Pads to play the notes in the chord.
- 3) Touch the same pads again to turn off the Chord Type and return the Note Pads to normal operation.

Menus:

- 1) There are currently 13 menus.
- 2) Navigate across menus using Previous Menu (F7) and Next Menu (F8).
- 3) Check out all the menus to discover the features that Express provides.

MicroSD Card:

- 1) Use a standard Windows compatible (FAT) MicroSD card to read, write and share songs.

Factory Reset:

- 1) To return your device to its original state, press and hold factory reset for ten seconds while plugging it in.
- 2) This erases any songs and profiles you've saved in the internal flash memory. External media is not modified.
- 3) Internet firmware updates are replaced by factory image.